## CANZZN-PTZ202XE-XT Quick Installation Guide

This manual provides instructions for quick installation and basic configuration of your IP device.

## Step1. Connect cables to IP device

Connect required cables to the device including the power cable and LAN cable. To see the correct positions of all connectors, refer to the following image below.



\* Model design and appearance are subject to change without any prior notice



Incorrect connection may cause malfunction or damage to the IP device.



**1)** Secure three screws in top of camera's main body as three unit holders with metal rings attached in the end.

**2)** Connect all necessary cables to a PCB board in a cover shield before conjoining the shield to a camera's main body.

**3)** Under the PCB board has a 32-pin connector which matches the main camera body's 32-pin socket; The shield's three unit holder holes also align with the main camera body's three unit holders.

**4)** Once cable connect is complete along with brackets and poles on an installation spot, align the connector (of the cover shield) and socket (of the main body), and then push the main body to conjoin together.

**5)** Once two units are attached, rotate the main camera body counterclockwise to secure the lock.

6) Insert three screws on top cover shield and tighten them up.



To prevent products from damaging, place the camera on stable and non-vibrating surfaces. If the stability is in doubt, consult with safety personnel for reinforcements, and then proceed with the installation.

## Step3. Set the lens position

The device is 360° rotating camera and fully controlled by web user interface. Once the unit's installation is complete and connected properly, please refer to ZN-XE Series Web User's Manual for the device's camera configuration instructions.

## Step4. Set up network environment

The default IP address of the device is 192.168.XXX.XXX. Users can identify the IP address of the device from converting the MAC address's hexadecimal numbers, which is attached to the device. Be sure that the device and PC are on a same area network before running the installation.

## **Generic IP Environment**

In case of generic private network environment where IP address 192.168.XXX.XXX are used, users may view the live streaming images on a web page using the device's default IP address:

1. Convert the device's MAC address to the IP address. Refer to the Hexadecimal-Decimal Conversion Chart at the end of the manual.

(The MAC address of the device is attached on the side or bottom of the device.)



- 2. Start the Microsoft<sup>®</sup> Internet Explorer web browser and enter the IP address of the device.
- 3. Web streaming and device configurations are supported through ActiveX program. When the ActiveX installation pop-up window appears, authorize and install the ActiveX setup.exe,

#### **Custom IP Environment**

IPAdminTool is provided with SDK at the following SDK path.

{SDK root}\BIN\TOOLS\AdminTool\

IPAdminTool is a management tool, which automatically scans all of the network products for users to perform administrative tasks, which includes network configurations, firmware update, device reboot, and device organizations.

IPAdminTool V3.3.	0				-			
<u>File S</u> etup <u>S</u> ystem								
IP Setup Up	pdate Reboot			Exit				
Selected Device :		🗌 Display Rack info 🛛 Stop Refreshing						
Product Name	IP Address	MAC Address	Hostname	Firmware	Uptime 🔺	~		
1CH Encoder	192.168.20.177	00:13:23:03:14:B1		FW V1.5.641.11710	00,00:01			
1CH Encoder	192.168.12.125	00:13:23:04:0C:71		0.99.14	00,00:03			
1CH Encoder	192.168.13.110	00:13:23:04:0D:6E		0.99.08	00,00:17			
1CH Encoder	192.168.111.90	00:13:23:04:6F:5A		0.99.13	00,00:21			
1CH Encoder	192.168.12.125	00:13:23:04:0C:7D		0.99.14	00,01:06			
1CH Encoder	192.168.20.111	00:13:23:03:14:6F		FW V1.5.662.14432	00,01:20			
1CH Encoder	192.168.35.193	00:13:23:03:23:C1		FW V1.5.662.14430	00,01:24			
1CH Encoder	192.168.12.144	00:13:23:04:0C:90		0.99.14	00,01:27			
1CH Encoder	192.168.13.114	00:13:23:04:0D:72		0.99.15	00,02:02			
1CH Encoder	192.168.12.139	00:13:23:04:0C:8B		0.99.09	00,02:28			
1CH Camera	192.168.13.105	00:13:23:04:0D:69		0.99.09	00,02:28			
1CH Camera	192.168.13.112	00:13:23:04:0D:70		0.99.09	00,02:28			
1CH Camera	192.168.13.113	00:13:23:04:0D:71		0.99.09	00,02:28			
1CH Camera	192.168.20.148	00:13:23:03:14:94		FW V1.5.662.14432	00,02:33			
1CH Camera	192.168.21.91	00:13:23:03:15:5B		FW V1.5.633	00,03:56			
1CH Camera	192.168.33.219	00:13:23:03:21:DB		FW V1.5.641.11710	00,04:29	(2008)		
1CH Camera	192.168.28.88	00:13:23:03:10:58		FW V1.5.641.11710	02.18:26	~		
Filter 20.177	Ap	ply		Device count : 135				

To modify the device's default IP address for customized network area;

- 1. Find the device from the IPAdminTool's list and highlight the device's name.
- 2. Right-click the mouse and select "IP Address"; IP Setup window appears.

C DHCP IP Address	Static	Local Network information							
IF Address   jiggi									
Subnet Mask 255 GateWay 192	. 168 . 58 . 87 . 255 . 0 . 0 . 168 . 0 . 254	Net 1 Client Network Information Adapter Info:Realtek PCIe GBE Family Controller							
DNS 168 new unique IP address in two sets and mirror other mation in other house	<u>. 1</u> 26 . 63 . 1	MAC Address:c86000992a68 IP Address:192.168.110.194 Subnet Mask:255.255.0.0 Gateway:192.168.0.254 DNS:164.124.101.2,203.248.240.31 PC environment Info							

- 3. In the IP Setup's window, information under 'Local Network information' displays the user/PC's network area information. Those information need to be incorporated to the IP Address, Subnet Mask, Gateway, and DNS boxes, except the last 2 sets of IP Address, which are to be the unique numbers for the device. Refer to the image above for the setting
- 4. Click 'Setup' to complete the modification.

#### Step5. View video on web page

Once the device's proper IP address has been identified, type the URL in a web browser to access the camera. At first time access, installation window may pop up.

This website wants to install the following add-on: 'AxUMF.cab' from 'Cap Co'.	What's the risk?	Install	×

1. When the browser asks to install the AxUMF software, click Install to proceed.



2. When Setup installation pop-up window appears, click install to proceed with rest of installations.



Depends on system OS and Internet Explorer version, Installation experience may differ from one another. Figures described above are from Windows 7, Internet Explorer 9 environment.

## Rebooting

Perform the following procedures to reset your device:

- 1. Press the Reset button for 2 seconds.
- 2. Wait for the system to reboot.



## **Resetting to the Factory Default Settings**

Resetting the device back to the factory default will initialize all parameters including the IP address back to the factory defaults. To reset back to the factory default;

- 1. Press reset button and hold.
- 2. Release the button after 5 seconds.
- 3. Wait for the system to reboot.

#### **More Information**

To learn more about using other features of your devices, refer to the manual, which is available on the SDK at the following path.

SDK root DOC

The factory default settings can be inferred as follows:

IP address:	192.168.хх.уу
Network mask:	255.255.0.0
Gateway:	192.168.0.1
User ID:	root
Password:	pass

# **Hexadecimal-Decimal Conversion Table**

Refer to the following table when you convert the MAC address of your device to IP address.

		-					_								
Hex	Dec		Hex	Dec	Hex	Dec		Hex	Dec	Hex	Dec	Hex	Dec	Hex	Dec
0	0		25	37	4A	74		6F	111	94	148	B9	185	DE	222
1	1		26	38	4B	75		70	112	95	149	BA	186	DF	223
2	2		27	39	4C	76		71	113	96	150	BB	187	EO	224
3	3		28	40	4D	77		72	114	97	151	BC	188	E1	225
4	4		29	41	4E	78		73	115	98	152	BD	189	E2	226
5	5		2A	42	4F	79		74	116	99	153	BE	190	E3	227
6	6		2B	43	50	80		75	117	9A	154	BF	191	E4	228
7	7		2C	44	51	81		76	118	9B	155	С0	192	E5	229
8	8		2D	45	52	82		77	119	9C	156	C1	193	E6	230
9	9		2E	46	53	83		78	120	9D	157	C2	194	E7	231
<b>0</b> A	10		2F	47	54	84		79	121	9E	158	С3	195	E8	232
0B	11		30	48	55	85		7A	122	9F	159	C4	196	E9	233
0C	12		31	49	56	86		7B	123	A0	160	C5	197	EA	234
0D	13		32	50	57	87		7C	124	A1	161	C6	198	EB	235
<b>0</b> E	14		33	51	58	88		7D	125	A2	162	C7	199	EC	236
OF	15		34	52	59	89		7E	126	A3	163	C8	200	ED	237
10	16		35	53	5A	90		7F	127	A4	164	С9	201	EE	238
11	17		36	54	5B	91		80	128	A5	165	CA	202	EF	239
12	18		37	55	5C	92		81	129	A6	166	СВ	203	FO	240
13	19		38	56	5D	93		82	130	A7	167	СС	204	F1	241
14	20		39	57	5E	94		83	131	A8	168	CD	205	F2	242
15	21		3A	58	5F	95		84	132	A9	169	CE	206	F3	243
16	22		3B	59	60	96		85	133	AA	170	CF	207	F4	244
17	23		3C	60	61	97		86	134	AB	171	D0	208	F5	245
18	24		3D	61	62	98		87	135	AC	172	D1	209	F6	246
19	25		3E	62	63	99		88	136	AD	173	D2	210	F7	247
1A	26		3F	63	64	100		89	137	AE	174	D3	211	F8	248
1B	27		40	64	65	101		8A	138	AF	175	D4	212	F9	249
1C	28		41	65	66	102		8B	139	B0	176	D5	213	FA	250
1D	29		42	66	67	103		8C	140	B1	177	D6	214	FB	251
1E	30		43	67	68	104		8D	141	B2	178	D7	215	FC	252
1F	31		44	68	69	105		8E	142	B3	179	D8	216	FD	253
20	32		45	69	6A	106		8F	143	B4	180	D9	217	FE	254
21	33		46	70	6B	107		90	144	B5	181	DA	218	FF	255
22	34		47	71	6C	108		91	145	B6	182	DB	219		
23	35		48	72	6D	109		92	146	B7	183	DC	220		
24	36		49	73	6E	110		93	147	B8	184	DD	221		