


H.264 NETWORK CAMERA

GANZ
PixelPro WITH OXi TECHNOLOGY **SERIES**

ZN1-M4FN3

| Installation Guide

Before connecting, operating or adjusting this product,
read this instruction booklet carefully and completely

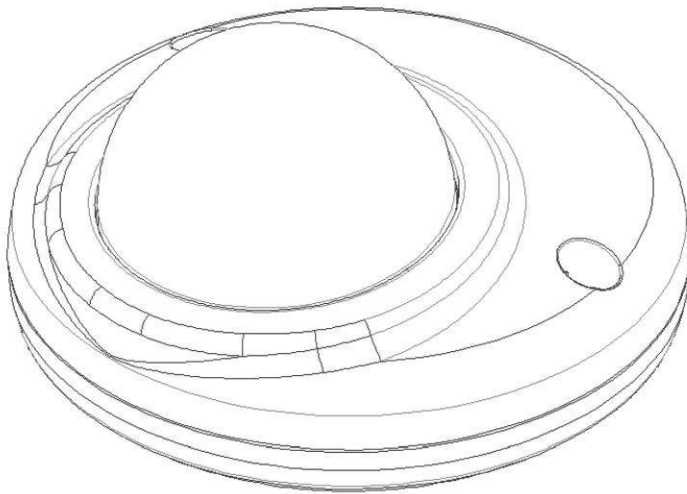

Precaution

- Please read this manual carefully before installing the unit.
- Never disassemble the camera. Unauthorized disassembly may cause equipment failure or damage to the unit.
- Please do not install the camera in a place exposed to direct sunlight.
- Do not operate the camera in environments beyond the specified temperature. Refer to “**Environment Condition**” on “**APPENDIX (A) : SPECIFICATIONS**” in this manual.
- Before applying power to the camera, check the power source to ensure that it is within the specifications. Refer to “**Electrical Characteristics**” on “**APPENDIX (A) : SPECIFICATIONS**”

Table of Contents

Precaution	2
1. FEATURES	4
2. PACKAGE CONTENTS	5
3. PART NAMES	6
4. INSTALLATION	7
4.1. Installing the camera.....	7
4.2. Adjusting the angle of camera	9
4.3. Setting the Image Attribute	10
5. CONNECTIONS	11
6. CONFIGURATION	12
6.1. Set up network environment	12
6.1.1. Generic IP Environment	12
6.1.2. Custom IP Environment.....	13
6.2. View video on web page	14
6.2.1. ActiveX Installation.....	14
6.2.2. View video using IPAdmin Tool.....	15
6.3. Reset.....	16
6.4. Factory Default.....	16
6.5. Safe Mode	17
APPENDIX (A): SPECIFICATIONS	19
Summary	19
Electrical Characteristics	20
Environment Condition	20
Mechanical Condition	20
APPENDIX (B): POWER OVER ETHERNET	21
Power Comparison.....	21
APPENDIX (C): DIMENSIONS	22
APPENDIX (D): HEXADECIMAL-DECIMAL CONVERSION TABLE	23
REVISION HISTORY	24

1. FEATURES

Camera

- 1/2.7" 1080p CMOS Image Sensor
- Digital Day/Night
- WDR
- Vandal Proof (IK09)

Video

- H.264 Baseline, Main, High profile(MPEG-4 Part 10/AVC), MJPEG(Motion JPEG)
- Max 30fps in 1080p
- Text Overlay

Network

- 10 / 100 Base-T Ethernet

Integration

- Software Development Kit (SDK) available
- ONVIF Compliant (Profile S)

General

- microSD slot
- Power Over Ethernet (PoE)


Video Contents Analysis (VCA)

- VCA Presence (Standard)
- VCA Surveillance (Optional)

2. PACKAGE CONTENTS

Please unpack the package carefully and handle the equipment with care.
The package contains:


Camera

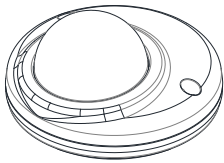


Screws and anchor blocks



Quick Installation Guide




Hex Wrench Driver



White Plug




Installation Template



Note

The contents above are subject to change without prior notice.

3. PART NAMES

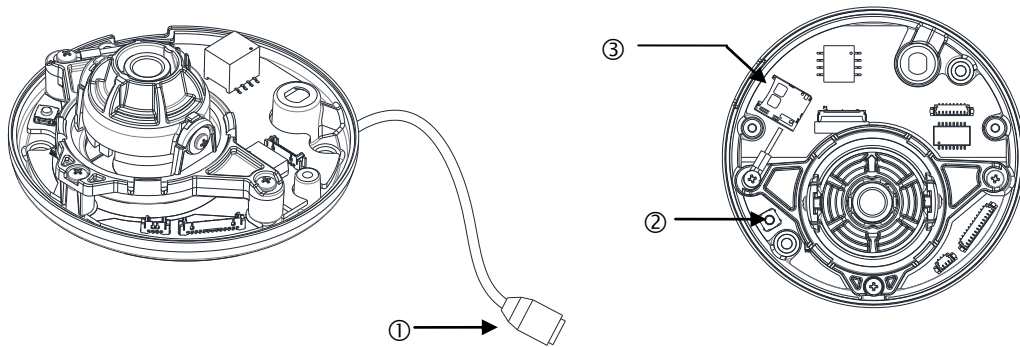

* Models herein and their appearance are subject to change without any prior notice.

① LAN connector

RJ45 LAN connector for 10/100 Base-T Ethernet (PoE supported).

② Reset button


Use the button to restart the device or to reset it to Factory Default.
Refer to “**6.3. Reset**” and “**6.4. Factory Default**” for more details.

③ microSD slot

Supports up to 64GB. Recommend Class 4 and higher for HD recordings.

4. INSTALLATION

4.1. Installing the camera

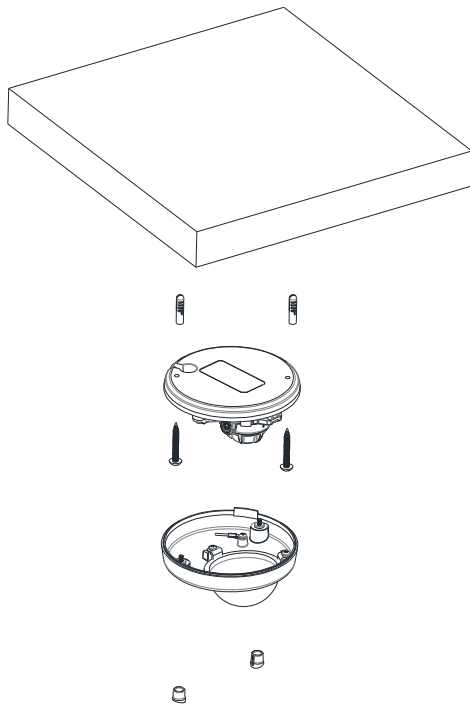

1) Place the installation template (outline shown on the next page) included in the package on the desired installation surface.

2) Drill holes in correct positions based on the template paper, and insert anchor blocks into the holes.

3) Make sure the necessary cables including a LAN cable and a power cable are properly connected to the camera either thru the ceiling or thru the groove around the mounting plate.

4) Place the camera body and match the alignment holes with the corresponding anchor blocks and hold against the mounting surface.

5) Tighten the anchor blocks with screws.

6) Adjust the angle of the camera. Refer to **"4.2. Adjusting the angle of camera"** for more details.


7) Place the dome cover on the main body of the camera. Dome cover has three alignment holes that match camera body's alignment holes.

8) Once properly placed, insert screws into the three holes of the body and tighten them up.



To prevent products from damage, place the camera on stable and non-vibrating surfaces. If the stability is in doubt, consult safety personnel for reinforcements, and then proceed with the installation.

Installation Template

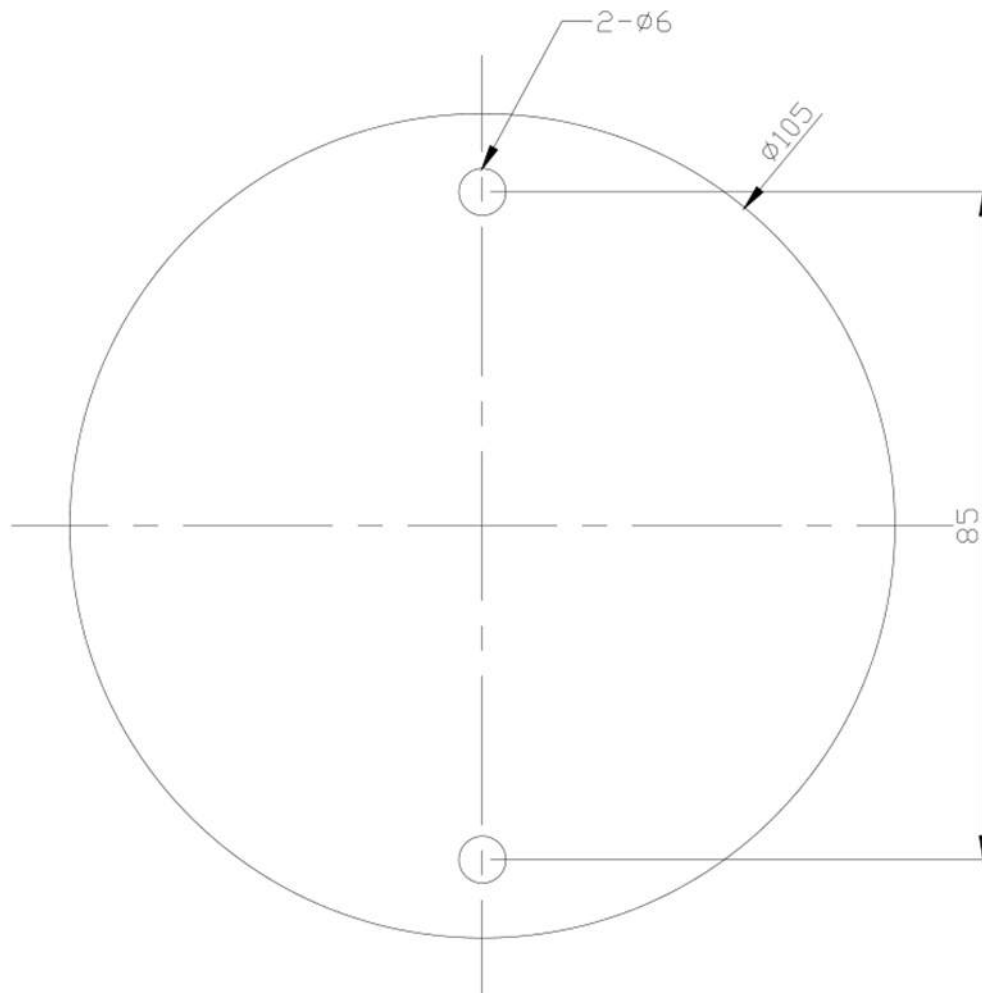


(Unit: mm)




Caution

Installation template's image size scale in this installation guide is not 1:1. The correct-size template design paper can be found inside the package separately.


4.2. Adjusting the angle of camera

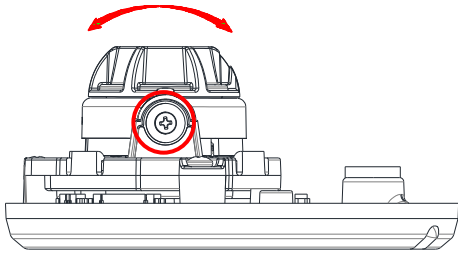

A. To tilt, tilt the lens by vertically adjusting the camera gimbal.

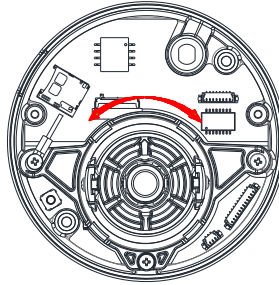

B. To pan, rotate the lower body of the camera gimbal.

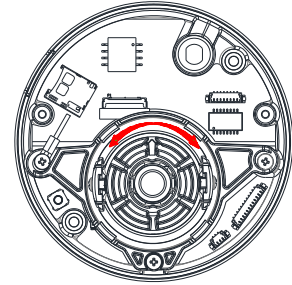

C. Rotate the lens with upper lens shell

Adjust the lens to the desired position by manually moving its upper lens shell, reinforced body or horizontal platform in the following directions.

4.3. Setting the Image Attribute

Through the camera's webpage, users can configure image settings. The menu of image attribute is available under Video Appearance menu in Setup > Video & Audio > Camera. The following features can be adjusted: Brightness, Contrast, Saturation, Sharpness and Orientation.


For more detailed information, refer to the provided "PixelPro GXi series Web Page User's Manual".

The screenshot displays the camera's configuration page for 'Setup > Video & Audio > Camera'. The settings are organized into several sections:

- General:** Friendly name is set to 'ZN-DNT352XE-MIR'.
- Video Appearance:** Brightness, Contrast, Saturation, and Sharpness are all set to 128. Orientation has 'Vertical flip' and 'Horizontal mirror' checked.
- Exposure:** Exposure mode is set to 'Auto'. Minimum shutter speed is 1/2000. Other options include Manual (1/30), Flickerless (50Hz/60Hz), Maximum AGC (50), Exposure adjustment (0 EV), Back light compensation (Off, center), Digital slow shutter (off), and Smart IR (Auto, 128).
- Digital Wide Dynamic Range:** The 'Enable' checkbox is unchecked.
- Day & Night:** Day & Night mode is set to 'Auto'. Day to Night level is 0, and Night to Day level is 3.
- White Balance:** White balance mode is 'atw1'. Red and Blue levels are both set to 128.
- Image Signal Processing:** Dynamic 2D DNR is set to 15.

At the bottom of the page, there are three buttons: 'Apply', 'Cancel', and 'Preview'.

5. CONNECTIONS

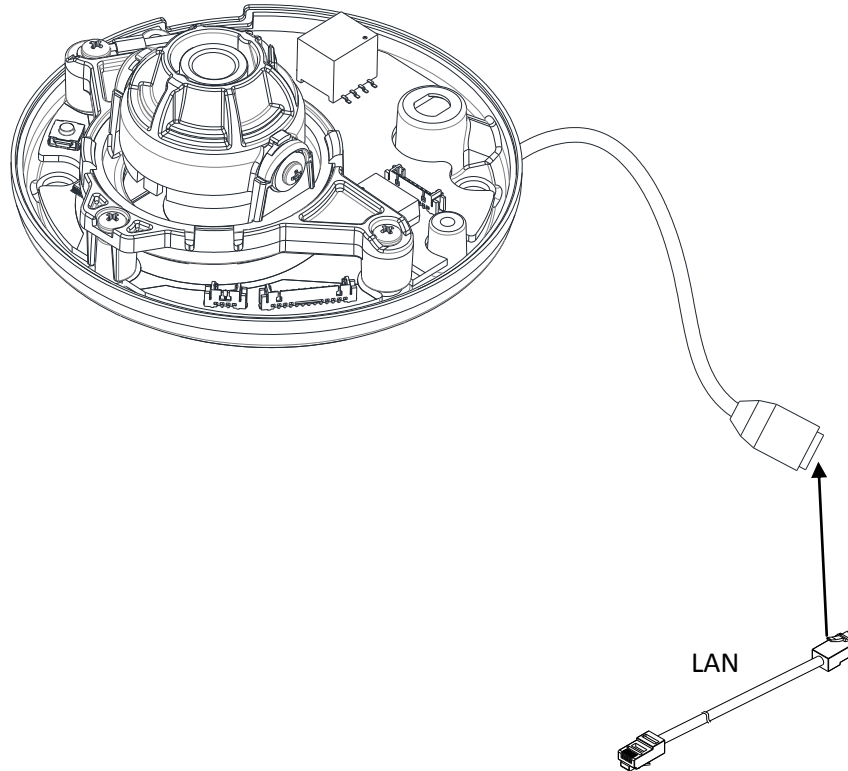

LAN connection


This is RJ45 LAN connector for 10/100 Base-T Ethernet and PoE. Use the Ethernet cable (RJ45) to power the device and connect the device to a hub or a router in the network. Refer to ***“Appendix (B) Power over Ethernet”*** for more details.

6. CONFIGURATION

6.1. Set up network environment

The default IP address of the device is 192.168.XXX.XXX. Users can identify the IP address of the device from converting the MAC address’s hexadecimal numbers, which is attached to the device. Be sure that the device and PC are on a same area network before running the installation.


IP address : **192.168.xxx.xxx**
Subnet mask: **255.255.0.0**

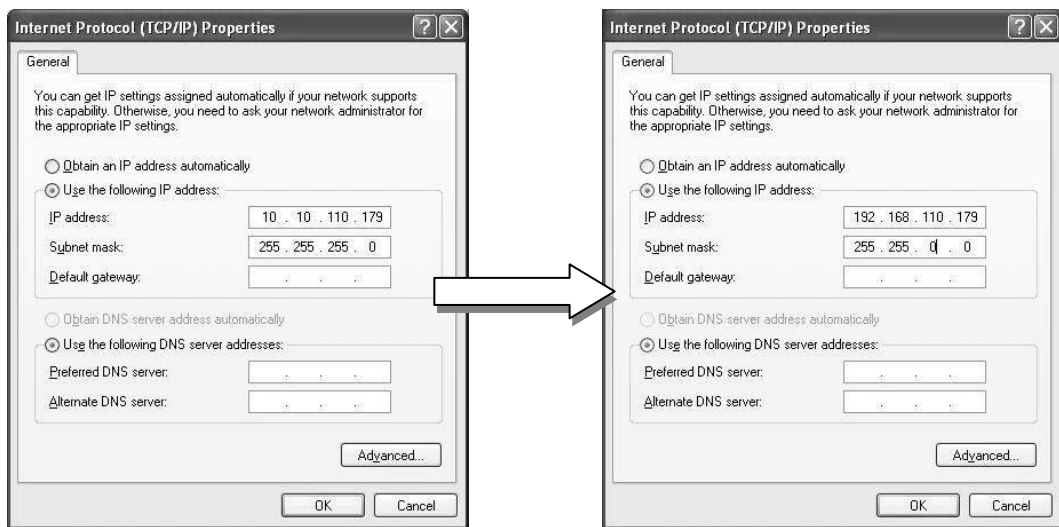

6.1.1. Generic IP Environment

In case of generic private network environment where IP address 192.168.XXX.XXX are used, users may view the live streaming images on a web page using the device’s default IP address:


1. Convert the device’s MAC address to the IP address. Refer to the Hexadecimal-Decimal Conversion Chart at the end of the manual.
(The MAC address of the device is attached on the side or bottom of the device.)

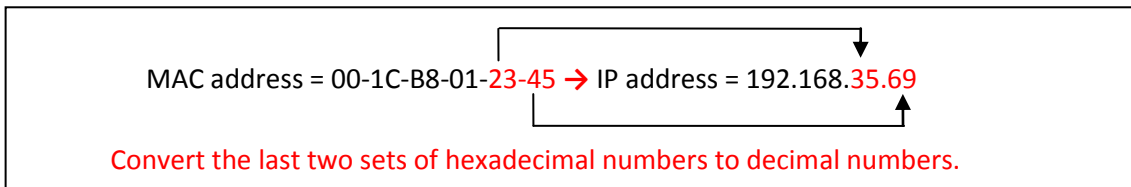

2. Start the Microsoft® Internet Explorer web browser and enter the address of the device.
3. Web streaming and device configurations are supported through ActiveX program. When the ActiveX installation window appears, authorize and install the ActiveX.


6.1.2. Custom IP Environment

IPAdminTool is a management tool, which automatically scans all of the network products for users to perform administrative tasks, which includes network configurations, firmware update, device reboot, and device organizations.

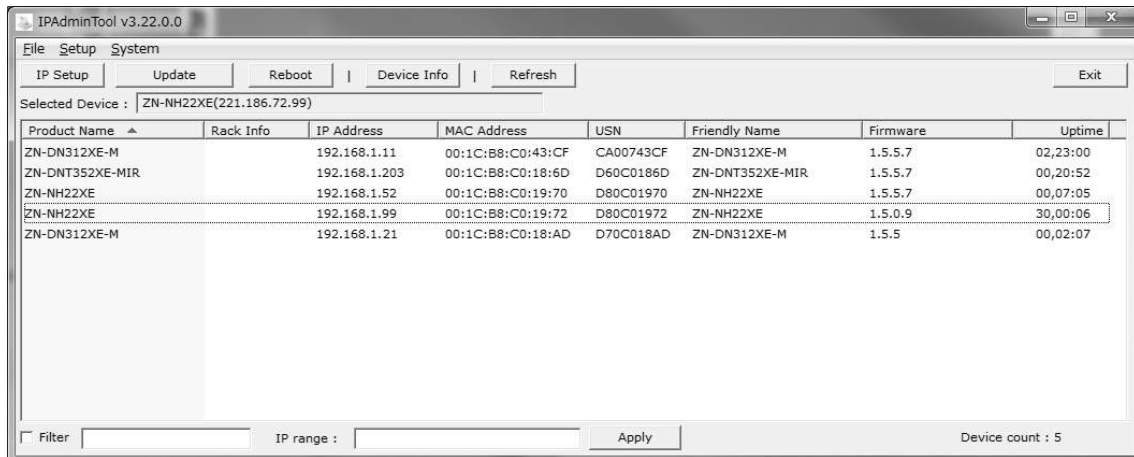

To modify the device's default IP address for customized network area;

1. Find the device from the IPAdminTool's list and highlight the device's name.
2. Right-click the mouse and select "IP Address"; IP Setup window appears.

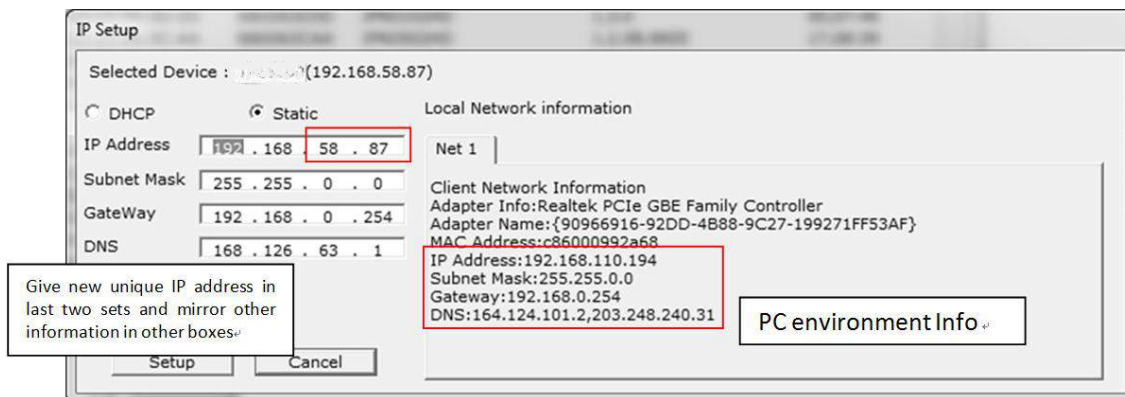


3. In the IP Setup's window, information under "Local Network information" displays the user/PC's network area information. Those information need to be incorporated to the IP Address, Subnet Mask, Gateway, and DNS boxes, except the last 2 sets of IP Address, which are to be the unique numbers for the device. Refer to the image above for the setting
4. Click "Setup" to complete the modification.

6.2. View video on web page

Type the proper IP address to view the live streaming images through a web browser. The default username and password is **root / pass**.

6.2.1. ActiveX Installation



1. When the browser asks to install the AxUMF software, click “**Install**” to proceed.



2. When Setup installation pop-up window appears, click “**Install**” to proceed with rest of installations.




Depending on system OS and Internet Explorer version, installation experience may differ from one another. Figures described above are from Windows 7, Internet Explorer 9 environment.

6.2.2. View video using IPAdmin Tool

IPAdminTool automatically searches all activated network encoders and IP cameras and shows the product name, IP address, MAC address and etc.

1. From the IPAdminTool's product list, select the device by highlighting it.
2. Right-click the mouse and select "**Web view**".

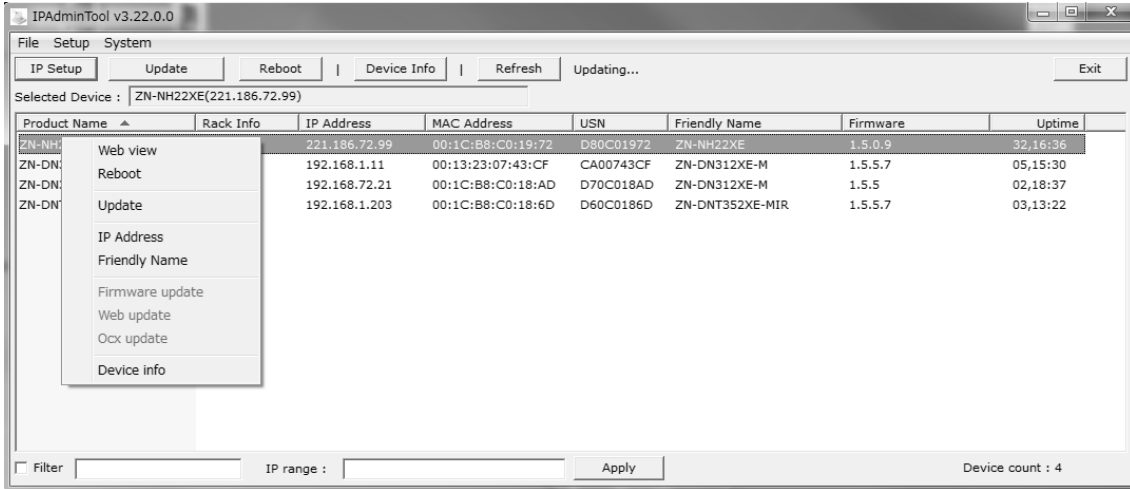

3. The system's default web browser opens the device's address.



Whether directly accessing the streaming video through typing IP address on a web page or taking steps through IPAdminTool, the ActiveX is needed to be installed for the Microsoft® Internet Explorer to have the complete configuration privileges.

6.3. Reset

Perform the following procedures to reset your device:

1. Press the reset button for 2 seconds while the device is in use.
2. Wait for the system to reboot.



Caution

Please do not hold for more than 2 seconds. Otherwise, the camera may be switched to its Factory Default settings.

6.4. Factory Default

Resetting the device back to the factory default will initialize all parameters including the IP address back to the factory defaults. To reset back to the factory default:

1. Press the reset button and hold.
2. Release the button after 10 seconds.
3. Wait for the system to reboot.

The factory default settings can be inferred as follows:



Note

IP address:	192.168.xx.yy
Network mask:	255.255.0.0
Gateway:	192.168.0.1
User ID:	root
Password:	pass

6.5. Safe Mode

What is Safe Mode?

Your IP camera or encoder could encounter an unexpected occasion such as broken firmware file or uncompleted loading of firmware file during system booting. To restore the device from the occasions, the device provides the emergency firmware as a factory default. Your device will get restarted with safe mode when there is any error on your booting system files.

Why does your IP camera or encoder boot in Safe Mode?

Normally, the cause of 'safe mode' is classified into two types.

- * When the power supply is unplugged in the middle of system booting.
- * When the firmware files required for system booting are damaged.

IMPORTANT: Your device will turn into the safe mode when it fails to boot certain times.

How to recover your system from Safe Mode

Safe Mode

Your device has entered safe mode now. Device is usually forced to safe mode when device recognizes itself not operating normally over times.
In most cases, repeated unstable power connection during the boot is the main cause for safe mode.
If you have seen your device in safe mode for the first time, just follow the instructions below to reboot the device.

1. Click 'Start Reboot' on the current page.
2. Wait until the device completely reboots. (*It may take a few seconds to several minutes.)
3. Refresh the webpage to check if it appears normal.

If the device is not recovered after you have done the above instructions, it may indicate that settings in device may have been corrupted.
Then, try the instructions as follows to reset all settings.

1. Click 'Reset All Settings' on the current page.
2. Wait until the device resets all settings. (*It may take a few seconds to several minutes.)
3. Check if the webpage appears normal.

If the device is still in safe mode after you have done the above procedure, it may indicate that there may be a corruption on the firmware of the device.
In this case, the device cannot be booted normally.
Thus, perform the firmware update according to the instructions below.

1. Click 'Browse', and select the appropriate firmware file.
2. Click 'START' to restore the firmware to the device. (*You will see the relevant messages during the firmware update.)
3. Check if the webpage appears normal.

If you are still on this page even after the above procedure, your device may have encountered the worst situation. Certain part of the hardware on the device may have been broken. Thus, you should contact your local agency for further assistance.

Reboot

Reset All Settings

Upload Firmware Image

Choose a firmware image to upload:

The messages above will appear on the webpage when your device has been rebooted in 'safe mode'. Then, you should follow the instructions on the webpage according to the steps in a row.



There are two types of firmware files when you receive a firmware folder from your vendor. When you need to update the firmware as the final resolution in case your device is in safe mode like above, ensure that the firmware means the firmware file for the device with the file name as GXi-V.1.X.X.X-~~~.enc.



There is another method to update firmware, which is using IPAdminTool. Please refer to '**IPAdminTool User's Manual.pdf**' for the detailed procedure.



If your device is still at safe mode after trying to update firmware, please contact your local agency to get further assistance.

* Firmware update for safe mode itself: If you want to update the firmware for safe mode, you should upload a firmware file with the following file name: GXi-SAFEMODE.~~~.enc.

APPENDIX (A): SPECIFICATIONS

Summary

Camera Module		
CMOS	Image Sensor	1/2.7" 1080p CMOS
	Effective Pixels	1920x1080
	Scanning system	Progressive scanning
ELECTRICAL	Resolution	1920 x 1080
	Min. Illumination	Color: 1.0Lux B/W : 0.001 Lux (DSS ON)
	AGC Control	Auto
Lens		2.8mm, F2.0
Day & Night		Digital Day & Night
WDR		Digital WDR
Video		
Compression Format	H.264 Baseline, Main, High profile(MPEG-4 Part 10/ AVC), MJPEG(Motion JPEG)	
Number of Streams	Dual Stream, Configurable streams in H.264, MJPEG H.264: Controllable frame rate, bandwidth(VBR/CBR) MJPEG: Controllable frame rate, JPEG quality	
Resolution	1920x1080, 1280x720, 1120x630, 960x540, 800x450, 640x360, 480x270, 320x180	
Compression FPS	30fps@1080p	
Motion Detection	Built-in	
Burnt-in Text (Digital)	Video stream overlay text	
Audio		
Input/output	-	
Compression Format	-	
Function		
Digital Input/output	-	
RS-485	-	
Network	10/100 Base-T	
Power over Ethernet (PoE)	Supported	
Protocol	QoS Layer 3 DiffServ, TCP/IP, UDP/IP, HTTP, HTTPS, RTSP, RTCP, RTP/UDP, RTP/TCP, mDNS, UPnP™, SMTP, DHCP, DNS, DynDNS, NTP, SNMPv1/v2c/v3(MIB-II), IGMP, ICMP, SSLv2/v3, TLSv1	
SD Slot	1 microSD slot (up to 64GB) ※ microSD Card is not included (Recommend Class 4 and higher for HD recordings)	

Electrical Characteristics

Power Source	PoE IEEE802.3af
Power Consumption	2.4W @ PoE
Video Output	-
Audio Input	-
Audio Output	-
D/I	-
D/O	-

Environment Condition

Operating Temperature	Operating Range PoE : 0 °C ~ 40 °C (32°F ~ 104°F)
Operating Humidity	Up to 85% RH

Mechanical Condition

Material	Aluminum Die-Casting (Vandal Resistance)
Color	Ivory
Dimension	Housing: 105.5 (∅) x 55.5(H) mm Dome : 55(∅) mm
Weight (Approx)	270g

* The specifications above are subject to change without any prior notice.

APPENDIX (B): POWER OVER ETHERNET

The Power over Ethernet (PoE) is designed to extract power from a conventional twisted pair Category 5 Ethernet cable, conforming to the IEEE 802.3af Power-over-Ethernet (PoE) standard. IEEE 802.3af allows for two power options for Category 5 cables.

The IEEE **802.3af-2003** standard allows up to 15.4 W of power the device. However, 12.95W is the available power, as some power gets lost in the cable. The updated IEEE **802.3at-2009 (PoE+)** standard allows up to 25.5 W (Max 34.2 W) of power the device.

PoE has advantages over conventional power in such places where AC powers cannot be reached or expensive to wire.



Note


For proper activation of PoE, the cable must be shorter than 100m and conform the PoE standard.

Power Comparison

The PoE Property supported by the device is **802.3af**.

Property	802.3af	802.3at
Available Power	12.95 W	25.50 W
Max. Power by PSE	15.40 W	34.20 W
Max. Current	350 mA	600 mA
Recommended Cable	Category 5 and above	Category 5e and above

APPENDIX (C): DIMENSIONS

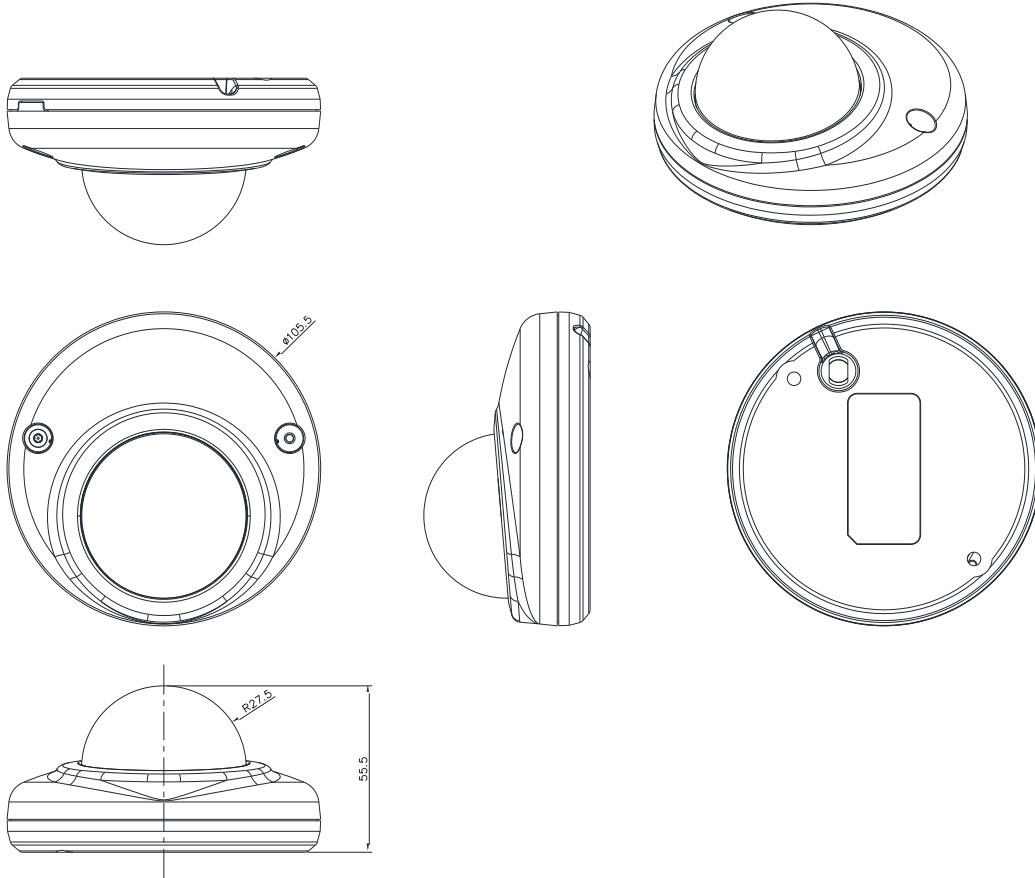

(Unit: mm)

APPENDIX (D): HEXADECIMAL-DECIMAL CONVERSION TABLE

Refer to the following table when converting the MAC address of the device to the IP address.

Hex	Dec	Hex	Dec	Hex	Dec	Hex	Dec	Hex	Dec	Hex	Dec	Hex	Dec
0	0	25	37	4A	74	6F	111	94	148	B9	185	DE	222
1	1	26	38	4B	75	70	112	95	149	BA	186	DF	223
2	2	27	39	4C	76	71	113	96	150	BB	187	E0	224
3	3	28	40	4D	77	72	114	97	151	BC	188	E1	225
4	4	29	41	4E	78	73	115	98	152	BD	189	E2	226
5	5	2A	42	4F	79	74	116	99	153	BE	190	E3	227
6	6	2B	43	50	80	75	117	9A	154	BF	191	E4	228
7	7	2C	44	51	81	76	118	9B	155	C0	192	E5	229
8	8	2D	45	52	82	77	119	9C	156	C1	193	E6	230
9	9	2E	46	53	83	78	120	9D	157	C2	194	E7	231
0A	10	2F	47	54	84	79	121	9E	158	C3	195	E8	232
0B	11	30	48	55	85	7A	122	9F	159	C4	196	E9	233
0C	12	31	49	56	86	7B	123	A0	160	C5	197	EA	234
0D	13	32	50	57	87	7C	124	A1	161	C6	198	EB	235
0E	14	33	51	58	88	7D	125	A2	162	C7	199	EC	236
0F	15	34	52	59	89	7E	126	A3	163	C8	200	ED	237
10	16	35	53	5A	90	7F	127	A4	164	C9	201	EE	238
11	17	36	54	5B	91	80	128	A5	165	CA	202	EF	239
12	18	37	55	5C	92	81	129	A6	166	CB	203	F0	240
13	19	38	56	5D	93	82	130	A7	167	CC	204	F1	241
14	20	39	57	5E	94	83	131	A8	168	CD	205	F2	242
15	21	3A	58	5F	95	84	132	A9	169	CE	206	F3	243
16	22	3B	59	60	96	85	133	AA	170	CF	207	F4	244
17	23	3C	60	61	97	86	134	AB	171	D0	208	F5	245
18	24	3D	61	62	98	87	135	AC	172	D1	209	F6	246
19	25	3E	62	63	99	88	136	AD	173	D2	210	F7	247
1A	26	3F	63	64	100	89	137	AE	174	D3	211	F8	248
1B	27	40	64	65	101	8A	138	AF	175	D4	212	F9	249
1C	28	41	65	66	102	8B	139	B0	176	D5	213	FA	250
1D	29	42	66	67	103	8C	140	B1	177	D6	214	FB	251
1E	30	43	67	68	104	8D	141	B2	178	D7	215	FC	252
1F	31	44	68	69	105	8E	142	B3	179	D8	216	FD	253
20	32	45	69	6A	106	8F	143	B4	180	D9	217	FE	254
21	33	46	70	6B	107	90	144	B5	181	DA	218	FF	255
22	34	47	71	6C	108	91	145	B6	182	DB	219		
23	35	48	72	6D	109	92	146	B7	183	DC	220		
24	36	49	73	6E	110	93	147	B8	184	DD	221		

REVISION HISTORY

MAN#	DATE(M/D/Y)	Comments
01A.01	07/05/2013	First release version
09-2013-A	09/04/2013	Minor updates
03-2014-A	03/31/2014	Correct explanation for PoE